



## Vending Machine Instructions

### Initial setup:

1. Carefully remove machine from the box
2. Locate the plastic bag containing 2 sets of keys inside the box.

### Filling the machine:

1. Insert one of the square white keys into the lock found on the top of the machine.
2. Turn the key clockwise to the "OPEN" position.
3. Lift the rear edge of the lid first. Push forward slightly as you lift the lid and the front should slide out of the clips that secure it.
4. Fill with 2" capsules or 45mm – 47mm balls only.
5. To close the machine, slide the catches into the grooves on the front of the machine and then carefully lower the back of the lid down into place.
6. Turn the key counterclockwise to the "CLOSE" position and remove the key.

### Accessing the coin receptacle and token mechanism:

1. The token receptacle is located on the side of the machine.
2. Inset one of the black rounded keys into the lock found on the side of the machine.
3. Turn the key clockwise to the "OPEN" position.
4. Pull the key to remove the drawer from the machine.
5. Insert your fingers into the slot on the left side of the drawer and flip the cover up.
6. Reverse the steps above to return the receptacle to the machine.

### Notes:

- SmileMakers vending machines are designed to accept 1" SmileMakers tokens. Attempting to insert other sized token or coins into the mechanism may result in a jam.
- SmileMakers vending machines are designed to work with 2" capsules and 45mm – 47mm balls. Capsules or balls of different sizes will not function with this machine.



**We are committed to offering you the best value for your dollar with the lowest prices — guaranteed!**

If you find a lower price (excluding shipping and handling) on an identical item anywhere in the U.S., we'll match it! Simply show us the printed or website advertisement with the competitor's price. Visit our website for more information.

Call 1-888-800-SMILE • SmileMakers.com